### Thank you for choosing a NIVELCO instrument!

### 1. APPLICATION

**NIVOSWITCH** R-300 series vibrating forks are for level detection of powder, lumpy solids and granules. Overfilling and emptying of silos or vessels can be prevented when using them as high or low fail-safe switches. The RC series (basic type insertion length = 125 mm [4.9"]) with casted forks are recommended for small granules, while the RL series (basic type insertion length = 137 mm [5.4"]) with welded forks are recommended for larger granules. Both RC and RL series are also available in dust Ex versions.

### 2. TECHNICAL DATA

### 2.1 GENERAL DATA

Туре		R□□-3□□-□, R□□-3□□-□Ex		
Medium pressure		40 bar (580 psi), 6 bar (87 psi) with PP flange See Derating diagram		
Insertion length		0.1253 m (4.9"10 feet)		
Material of wetted part	S	Casted fork DIN 1.4404, welded fork DIN 1.4571		
Medium temperature		–40+130 °C (–40+266 °F), See Derating diagram		
Ambient temperature		–40+70 °C (–40+158 °F), See Derating diagram		
Medium		$ ho$ $\geq$ 0.01 kg/dm $^3$		
	Getting immersed	0.5 sec		
Switching delay  Getting free		$\leq$ 1 s – selected high density (H) ( $\rho \geq$ 0.5 kg/dm³) $\leq$ 3 s – selected low density (L) ( $\rho$ < 0.5 kg/dm³)		
Indication of operation		Bi-color LED		
Test of operation		Output state can be changed with test magnet		

### 2.2 Two-wire DC VERSION

Tuna	2-wire DC			
Туре	R□□-3□□-6	R□□-3□□-7		
Electric connection	Connector	3 m (10 feet) cable (2 x 0.5 mm <sup>2</sup> [AWG20])		
Ingress protection	IP65	IP68		
Output	DC current change: fork free: 9 ±1 mA; fork immersed: 14 ±1 mA			
Power consumption	< 0.5 W			
Supply voltage	1527 V DC			
Selection of operation	LOW fail-safe L or HIGH fail-safe H on suggested isolator, by switch			
Selection of sensitivity	By inverting the polarity of connection			
Electric protection	Class III			

# NIVOSWITCH

R-300 VIBRATING FORK LEVEL SWITCH

### **USER'S MANUAL**



Dodávateľ: MICROWELL spol. s r. o. SNP 2018/42, 927 00 Šaľa Tel.: (+421) 31/ 770 7585 microwell@microwell.sk www.microwell.sk



### Manufacturer:

### **NIVELCO Process Control Co.**

H-1043 Budapest, Dugonics u. 11.
Tel.: (36-1) 889-0100 Fax: (36-1) 889-0200
E-mail: sales@nivelco.com www.nivelco.com

### 2.3 2-WIRE AC, 3-WIRE DC VERSION

Туре		2-wire AC		3-WIRE DC		
		RDD-3DD-1	R□□-3□□-2	R□□-3□□-3	R□□-3□□-4	
Electric connection		connector	3 m (10 feet) cable, 4 x 0.75 mm <sup>2</sup> (AWG18) max. cable length 30 m (100 feet)	connector	3 m (10 feet) cable 5 x 0.5 mm² (AWG20) max. cable length 30 m (100 feet)	
Ingress protection		IP65	IP68	IP65	IP68	
Selection of operation (Low fail-safe – L, H		By altering the connection		By switch on the cover	By inverting the polarity of connection	
Selection of density.	(Low density – L, high density – H)	Not possible $\rho$ ≥0.5 kg/dm³		By switch on the cover	With wiring	
Output	Output		serial AC output		Galvanically isolated PNP/NPN transistor switch	
Output protection		_		changing polarity, over surge, short cut		
Supply voltage		20255 V AC, 50/60 Hz		1255 V DC		
Power consumption		Depending on load		< 0.6 W		
Voltage drop between	en terminal points during operation	< 10.5 V		01.8 V		
Electric protection		Class I		Class III		
	max. continuous		350 mA AC 13, for Ex version (C, D) 140 mA		I <sub>max</sub> = 350 mA for Ex version 200 mA DC / U <sub>max</sub> = 55 V DC	
Current load	min. continuous	10 mA / 255 V, 25 mA / 24 V		-		
	max. impulse	1.5 A / 40 ms		_		
Residual current after switch off		< 6 mA		< 10 µA		
Mark of explosion protection		<b>⟨</b> E <sub>3</sub>	⟨ □ II ½ D IP65 T160°C for C, E output codes, ⟨ □ II ½ D IP68 T160°C for D, F output codes		°C for D, F output codes	

### 2.4 ACCESSORIES

- User's Manual
- Warranty Card
- EU Declaration of Conformity
- 1× 2 mm (0.08") thick KLINGER OILIT seal

### Components and accessories (sold separately):

- RPS-101 type screw driver with test magnet
- Sliding sleeve: RPH–112 (max. up to 6 bar [87 psi] medium pressure)

### 2.5 ORDER CODE

			NI	VOSWITCH R	Щ.	3
Түре	CODE	CONNECTION	CODE	CONNECTION	CODE	IN
Casted fork	С	1" BSP	M	2" ANSI RF 600 1.4571	В	1:
Welded fork	L	1½" BSP	Н	JIS 10K 50 A PP		2
		1" NPT	Р	JIS 40K 50 A 1.4571	K	0
		1½" NPT	N	1½" TriClamp	T	
		DN50 PN16 PP DIN	F	2" TriClamp	R	
		DN50 PN40 1.4571 DIN	G	Pipe coupling DN40	D	
		2" ANSI RF150 PP	Α	Pipe coupling DN50	E	

* Order codes of a	n Ex versions	end in 'Ex'

INSERTION LENGTH	С	ODE
125 / 137 mm		01
200 / 175 mm		02
0.33 m	03	330


2-wire AC+ connector	1			
2-wire AC + cable	2			
3-wire DC + connector	3			
3-wire DC + cable	4			
2-wire DC+ connector	6			
2-wire DC + cable	7			
Dust Ex				
2-wire AC+ connector	С			
2-wire AC + cable	D			
3-wire DC+ connector	E			


CODE

OUTPUT


3-wire DC + cable


### 2.6 DERATING DIAGRAMS






Temperature limits for DC devices
[IL] Current load
[TA] ambient temperature






Temperature limits AC [T<sub>A</sub>] ambient temperature [T<sub>M</sub>] medium temperature


### 2.7 DIMENSIONS

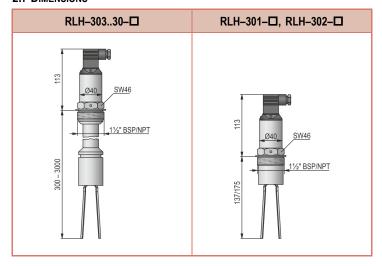

TriClamp (ISO 2852)	Pipe o	oupling DIN	11581
-125 -108 175', 2" Ticlamp (ISO 2862)	717	Ø40 A Ø	<u>28</u>
	TYPE	RCD	RCE
	Conn.	DN 40	DN 50
	Α	RD 65x1/6	RD 78x1/6

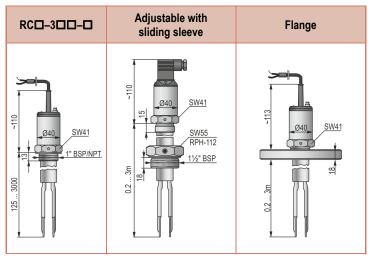


### 2.8 MATERIALS

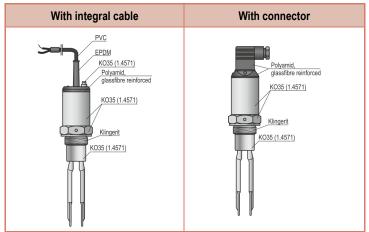


### 3. INSTALLATION

Prevent device from being damaged during delivery, storage, mounting and test.

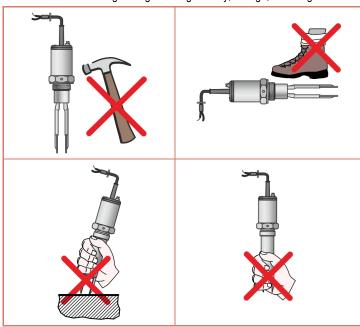

Before installation it is advised to try the operation of the level switch in a small sample of material in order to set the proper density. Tightening of the model with thread process connection should only be done with open end SW41, SW46 or SW55 spanner.




For positioning of the fork tine use the marking on the hexagonal neck.

The recommended mounting position of the fork for light, free flowing solids, is vertical (top) mounting. Side mounting is recommended only in cases when the fork-tines are easily freed from the process medium. In case of side mounting, **NIVOSWITCH** must be mounted with the fork-tines standing vertically.

When determining mounting location, take into account the possible caving or arching of the material in the tank.

The fork should be protected against falling materials. This is to be done so that material could not clog between the fork and the protection plate.

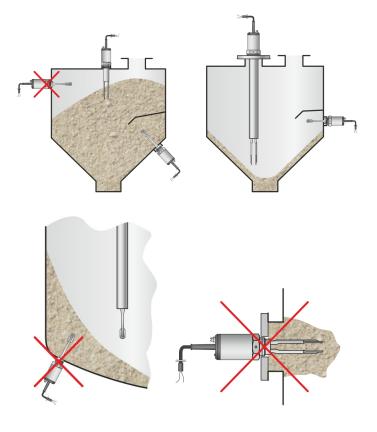


### 4. WIRING

IMPORTANT! The NIVOSWITCH level switches incorporate overvoltageprotection circuit. Nevertheless, this overvoltage protection may not be enough in case of inductive loads. It is recommended to use external protection circuits installed next to the inductive loads (the suitable schematic diagrams can be found in the catalogues of the relay manufacturers).

4.1. 2-WIRE AC R□□-3□□-1 with connector R□□-3□□-2 with cable


### THE UNIT SHOULD NOT BE POWERED UP WITHOUT GROUNDING AND **EXTERNAL LOAD!**

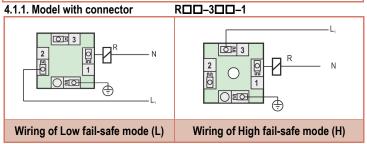

Terminal block cover can be rotated in 90° steps to ensure appropriate cable positioning.

### 4.1.2. Integral cable version R 🗆 🗆 –3 🗆 🗆 –2


The integrated cable has 4 wires. The connection to the AC network is done with 3 wires. Since there cannot be any unconnected wire all the 4 wires should be connected to a junction box as seen below.

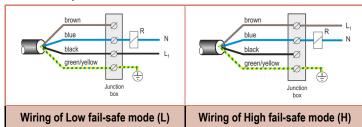


### 4.2. 3-WIRE DC VERSION

R 🗆 🗆 –3 🗆 🗆 –3 R□□-3□□-4


In case of overload caused by short circuit, the transistor will switch on and off, and the LED will start to blink.



#### 4.2.1.1. Wiring diagram of the 3-wire DC connector version with relay

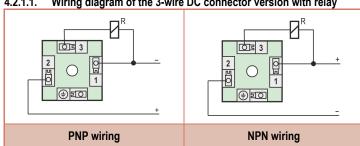


Terminal block cover can be rotated in 90° steps to ensure appropriate cable positioning.

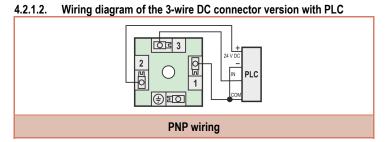


### 4.2.2. Integral cable version R□□-3□□-4

### 4.2.2.1. Wiring with relay


### PNP wiring – high (H) density ( $\rho \ge 0.5 \text{ kg/dm}^3$ )

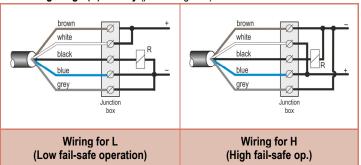


### PNP output – low (L) density ( $\rho$ < 0.5 kg/dm<sup>3</sup>)

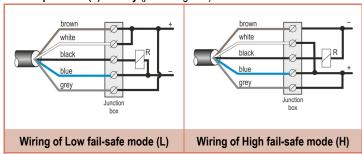

### **NPN wiring – high (H) density**, ( $\rho \ge 0.5 \text{ kg/dm}^3$ )

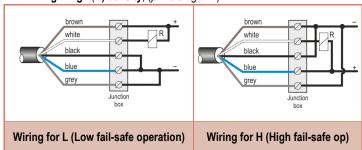


### NPN wiring – low (L) density ( $\rho$ < 0.5 kg/dm<sup>3</sup>)

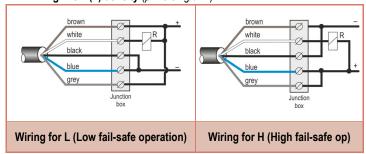


### 4.2.2.2. Wiring with PLC

## **4.2.2.3.** PNP wiring high (H) density, $(\rho \ge 0.5 \text{ kg/dm}^3)$

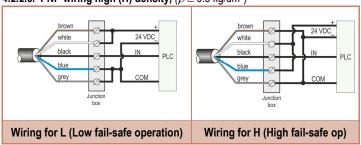



### **PNP wiring – low (L) density** (for solids: $\rho$ < 0.5 kg/dm<sup>3</sup>),

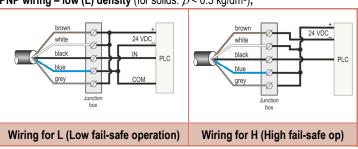

### 4.3. 2-WIRE DC VERSION

### 4.3.1. Connector version





### 5. SET UP, ADJUSTMENT, PUTTING INTO OPERATION

Check wiring and setting of switches (if any). After powering up the vibrating fork is operational. The operation is summarised in the table below

Power supply	Fork	Mode	Display (LED)		Output
		High	Red	OFF	I <sub>min</sub> U <sub>power</sub>
	Immersed	Low	Green		IN R Upower
ON		High	Green	ON	ON power
	Free	Low	Red	OFF	I <sub>min</sub> U <sub>power</sub>
NONE	Free or immersed	H or L	Off	OFF	OFF

### State of operation of the 2-wire DC version

	Fork	Display (LED)	Output
Immersed		Red	14 ±1 mA
Free		Green	9 ±1 mA

### **OPERATION TEST**

Operation of the switch can be verified with the help of the optional screwdriver with magnet (RPS-101).

When moving the magnet in front of the marking on the enclosure the state of the switch (color of the LED) should be changed.

### 6. MAINTENANCE AND REPAIR

The device does not require regular maintenance. In some instances, however, the vibrating section may need to be cleaned from material deposits. This must be carried out carefully. The warranty card contains the terms and conditions. Before returning the device for repairs, it must be cleaned thoroughly. The parts in contact with the medium may contain harmful substances; therefore, they must be decontaminated.

Our official form (Returned Equipment Handling Form) must be filled and enclosed in the parcel. Download it from our website www.nivelco.com. The device must be sent back with a declaration of decontamination. A statement must be provided in the declaration that the decontamination process was successfully completed and that the device is clean from any hazardous substances.

### 7. STORAGE CONDITIONS

Ambient temperature: −25...+70 °C (−13...+158 °F) Relative humidity: max. 98%

> rcm301en1408h rcm3014a0600h\_08 November 2014

NIVELCO reserves the right to change anything in this manual without notice!